

FLUKE®

Fluke 116

HVAC Multimeter

with Temperature and Microamps

Technical Data



Compact true-rms meter for HVAC troubleshooting

The Fluke 116 was specifically designed for the HVAC professional. It has everything needed in an HVAC meter including temperature and microamp measurements to quickly troubleshoot problems with HVAC equipment and flame sensors.

Features include:

- Built in thermometer for HVAC applications
- Microamps to test flame sensors
- LoZ: helps prevent false readings due to ghost voltage
- Large white LED backlight to work in poorly lit areas
- Resistance, continuity, frequency and capacitance
- Min/Max/Average with elapsed time to record signal fluctuations
- Compact ergonomic design for one-handed operation
- Compatible with optional magnetic hanger (ToolPak™)
- CAT III 600 V safety rated

General specifications

Accuracy is specified for 1 year after calibration, at operating temperatures of 18 °C to 28 °C, with relative humidity at 0 % to 95 %.

The accuracy specifications take the form of:
 $\pm ([\% \text{ of reading }] + [\text{ counts }])$

Maximum voltage between any terminal and earth ground	600 V
Surge protection	6 kV peak per IEC 61010-1 600 V CAT III, Pollution Degree 2
Display	Digital: 6,000 counts, updates 4/sec
Bar graph	33 segments, updates 32/sec
Operating temperature	-10 °C to + 50 °C
Storage temperature	-40 °C to + 60 °C
Battery	9 volt Alkaline, NEDA 1604A/IEC 6LR61
Battery life	400 hours typical, without backlight

Actual size



Accuracy specifications

Measurement	Range	Resolution	Accuracy ± ([% of reading] + [counts])
DC millivolts	600.0 mV	0.1 mV	2.0 % + 3
DC volts	6.000 V	0.001 V	
	60.00 V	0.01 V	
	600.0 V	0.1 V	
Auto volts	600.0 V	0.1 V	2.0 % + 3 (dc, 45 Hz to 500 Hz) 4.0 % + 3 (500 Hz to 1 kHz)
AC millivolts ¹ true-rms	600.0 mV	0.1 mV	1.0 % + 3 (dc, 45 Hz to 500 Hz) 2.0 % + 3 (500 Hz to 1 kHz)
AC volts ¹ true-rms	6.000 V	0.001 V	1.0 % + 3 (45 Hz to 500 Hz) 2.0 % + 3 (500 Hz to 1 kHz)
	60.00 V	0.01 V	
	600.0 V	0.1 V	
Continuity	600 Ω	1 Ω	Beeper on < 20 Ω off > 250 Ω; detects opens or shorts of 500 μs or longer.
Ohms	600.0 Ω	0.1 Ω	0.9 % + 2
	6.000 kΩ	0.001 kΩ	0.9 % + 1
	60.00 kΩ	0.01 kΩ	
	600.0 kΩ	0.1 kΩ	
	6.000 MΩ	0.001 MΩ	
40.00 MΩ	0.01 MΩ	1.5 % + 2	
Diode test	2.000 V	0.001 V	0.9 % + 2
Capacitance	1000 nF	1 nF	1.9 % + 2
	10.00 μF	0.01 μF	
	100.0 μF	0.1 μF	
	9999 μF	1 μF	
	100 μF to 1000 μF		1.9 % + 2
> 1000 μF		5 % + 20	
Lo-Z capacitance	1 nF to 500 μF		10 % + 2 typical
Temperature (Type-K thermocouple)	-40 °C to 400 °C	0.1 °C	1 % + 10 ₂
	-40 °F to 752 °F	0.2 °F	1 % + 18 ₂
AC μamps true-rms (45 Hz to 500 Hz)	600.0 μA	0.1 μA	1.5 % + 3 (2.5 % + 3 > 500 Hz)
DC μamps	600.0 μA	0.1 μA	1.0 % + 2
Hz (V or A input) ²	99.99 Hz	0.01 Hz	0.1 % + 2
	999.9 Hz	0.1 Hz	
	9.999 kHz	0.001 kHz	
	50.00 kHz	0.01 kHz	

Notes:

¹ All ac voltage ranges are specified from 1 % to 100 % of range. Because inputs below 1 % of range are not specified, it is normal for this and other true-rms meters to display non-zero readings when the test leads are disconnected from a circuit or are shorted together. For volts, crest factor of ≤ 3 at 4000 counts, decreasing linearly to 1.5 at full scale. AC volts is ac-coupled. Auto-V LoZ, and ac mV are dc-coupled.

² Temperature uncertainty (accuracy) does not include the error of the thermocouple probe.

³ Frequency is ac coupled, 5 Hz to 50 kHz for ac voltage. Frequency is dc coupled, 45 Hz to 5 kHz for ac current.

Ordering information

Fluke-116 HVAC Multimeter with Temperature and Microamps

Included

TL75 Test Leads, 80BK Integrated Temperature Probe, holster, User's manual and 9V battery (installed).



Fluke. Keeping your world up and running.

Fluke Corporation

PO Box 9090, Everett, WA USA 98206

Fluke Europe B.V.


PO Box 1186, 5602 BD Eindhoven, The Netherlands

For more information call:

In the U.S.A. (800) 443-5853 or Fax (425) 446-5116
 In Europe/M-East/Africa (31 40) 2 675 200 or Fax (31 40) 2 675 222
 In Canada (800)-36-FLUKE or Fax (905) 890-6866
 From other countries +1 (425) 446-5500 or Fax +1 (425) 446-5116
 Web access: <http://www.fluke.eu>

©2006 Fluke Corporation. All rights reserved. Printed in U.S.A. 8/2006 Pub_ID: 11158-eng

Service van EURO-INDEX b.v.

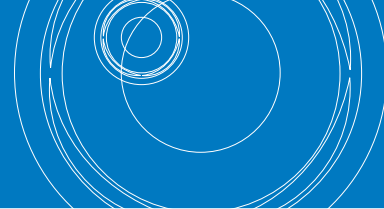

EURO-INDEX b.v. verleent service op alle meetinstrumenten uit haar leveringspakket en biedt de faciliteiten, kennis en hoog gekwalificeerd personeel voor (preventief) onderhoud, reparatie en kalibratie van uw meetinstrumenten.


Geautoriseerd Service Centrum

EURO-INDEX b.v. is van alle vertegenwoordigde merken een Geautoriseerd Service Centrum.

Dit betekent dat uw instrumenten worden behandeld door goed opgeleid en kundig personeel, dat beschikt over de juiste gereedschappen en software. Er worden uitsluitend originele onderdelen toegepast en de garantie van uw instrument, evenals de certificering (ATEX, EN50379, etc.) blijven intact.

Service en kalibratielaboratorium

EURO-INDEX b.v. beschikt over een bijzonder modern service- en kalibratielaboratorium met RvA accreditatie naar NEN-EN-ISO/IEC 17025. Deze accreditatie geldt voor verschillende grootheden, zoals gespecificeerd in de scope bij accreditatienummer K105.

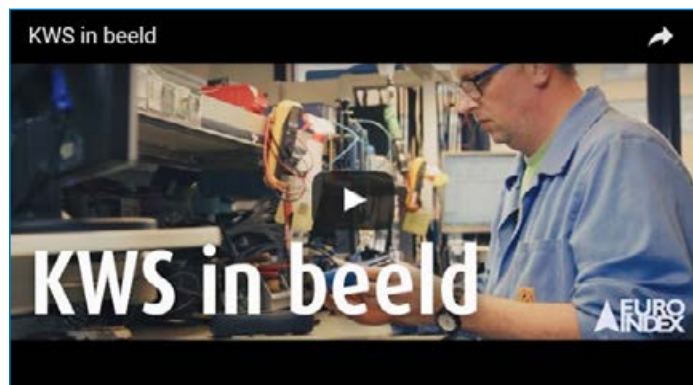

Bekijk de video en ontdek alles over KWS

KWS®

KWS is een uniek servicesysteem voor uw meetinstrumenten met periodiek onderhoud en kalibratie. Veel zaken worden voor u geregeld, zodat u zonder zorgen gebruik kunt maken van uw meetinstrumenten. De kosten zijn laag en voorspelbaar.

Digitale toegang tot uw kalibratiecertificaten met Mijn KWS

Via het Mijn KWS webportal heeft u altijd en overal beschikking over uw kalibratiecertificaten en gerelateerde documenten.

Verhuur van meetinstrumenten

- Uitgebreid assortiment
- Deskundig advies
- Instrumenten worden geleverd met accessoirepakket en herleidbaar kalibratiecertificaat

EURO-INDEX Academy

- Producttrainingen (individueel en klassikaal)
- Seminars
- Demonstratie- en instructievideo's



Servicebalie



Kalibratie rookgasanalyse



Seminars en workshops



Kalibratie thermografie

Wijzigingen voorbehouden EURO-INDEX® NL 16003



NEderland
Rivium 2e straat 12
2909 LG Capelle a/d IJssel
T: 010 - 2 888 000
F: 010 - 2 888 010
verkoop@euro-index.nl
www.euro-index.nl



BELGIË
Leuvensesteenweg 607
1930 Zaventem
T: +32 - (0)2 - 757 92 44
F: +32 - (0)2 - 757 92 64
info@euro-index.be
www.euro-index.be