

APPLICATION NOTE


Renaming test files on the MPQ units

Once the recording is stopped, the file that is created on the SD card is assigned a default filename – **Testxxx** where xxx is the test number.

This filename can be changed on the MPQ unit. This feature can be used to keep track of recordings if the user has to record on multiple locations before downloading the data to a computer.

Follow the steps given below to rename files on the MPQ.


1. From the **Home** screen, go to **View data** to access the test files and select the file you want to rename.

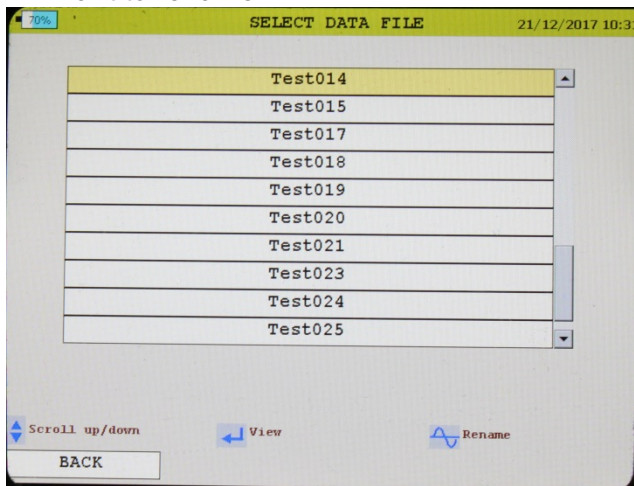


2. Press the **Scope shortcut key** .


APPLICATION NOTE

Renaming test files on the MPQ units

3. A keypad appears on the screen. Use the navigation keys to move to different keys on the keypad and press the **Enter key**  to select a character/number. By pressing the key multiple times, you'll be able to toggle between different characters associated with a key. If you have to type two characters associated with the same key, you can select the first character, press any navigation key and then select the second character.

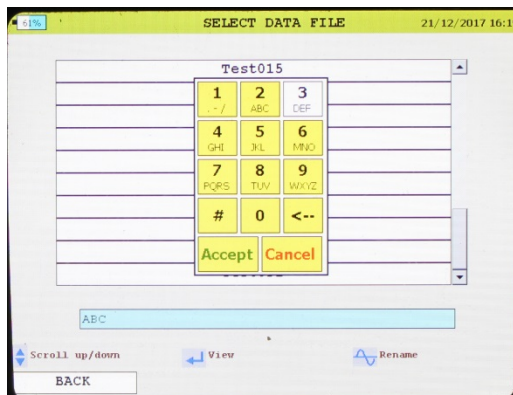

4. After you have finished typing the name, select **Accept** on the keypad.

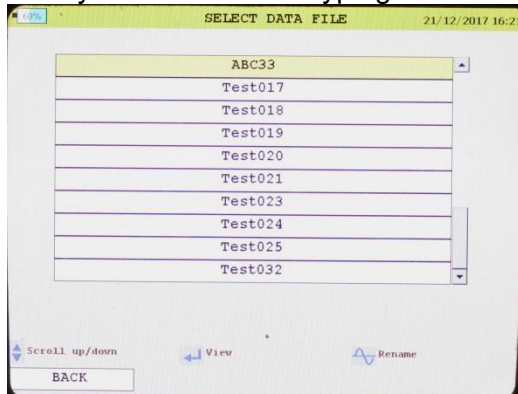

5. The renaming process is complete.